




Acer Aspire 7736Z-4809 Wireless Module Replacement

If your Wi-Fi connections are not working, replacing the wireless module may solve this problem.

Written By: Pnithan Jantarakolica

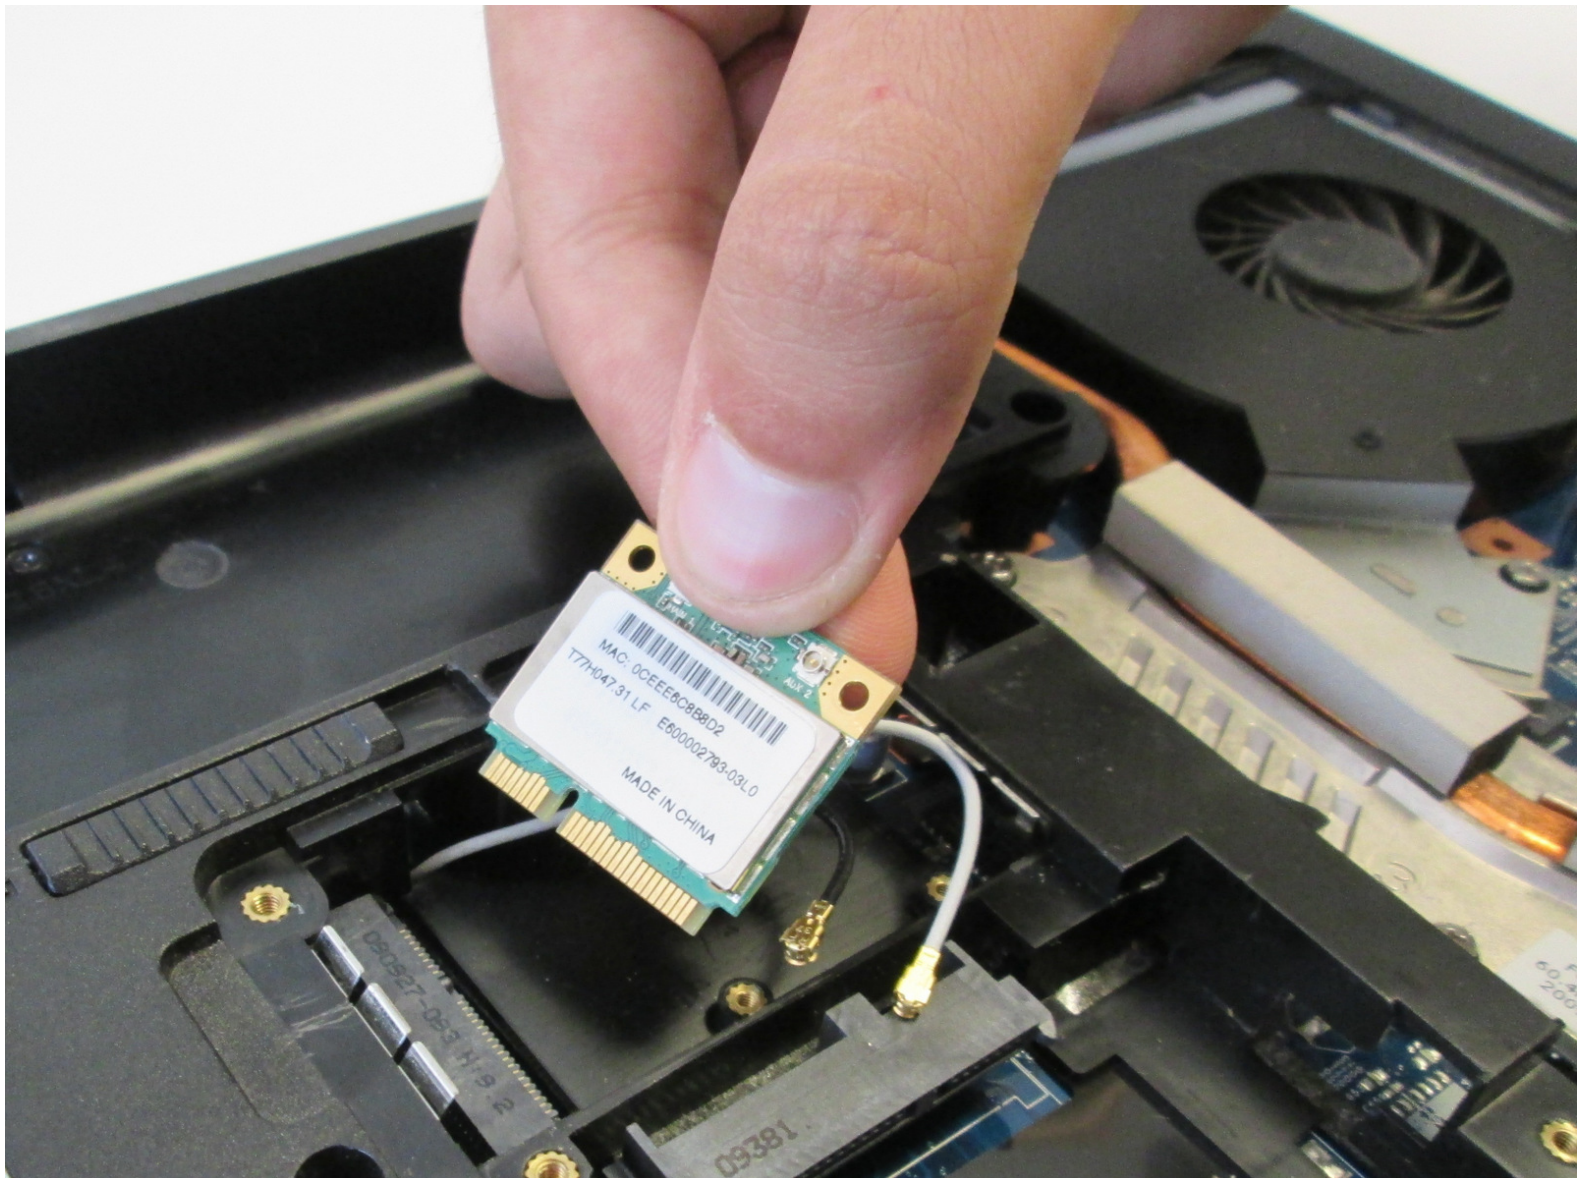

INTRODUCTION

Before replacing the wireless module, make sure the replacement module is compatible with the laptop.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:

- [PCIe wireless LAN module](#) (1)
-

Step 1 — Acer Aspire 7736Z-4809 Repair Preparation



- Unplug and power off the laptop.
- ⓘ If the battery is still connected to the laptop, remove the battery.

Step 2




- Flip over the laptop so that the back panel of the laptop is facing up.

Step 3 — Back Panel




- Use the Phillips #1 screwdriver to remove the eight 6.5 mm Phillips #1 screws.
- ⓘ Only the four screws in the center are removable, the four along the edges are held in by rivets but can be loosened.

Step 4

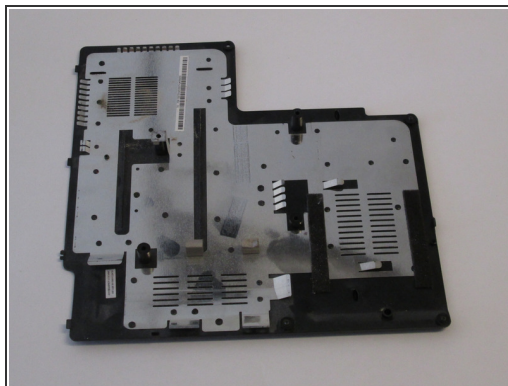

- Remove the back panel of the laptop.



Step 5

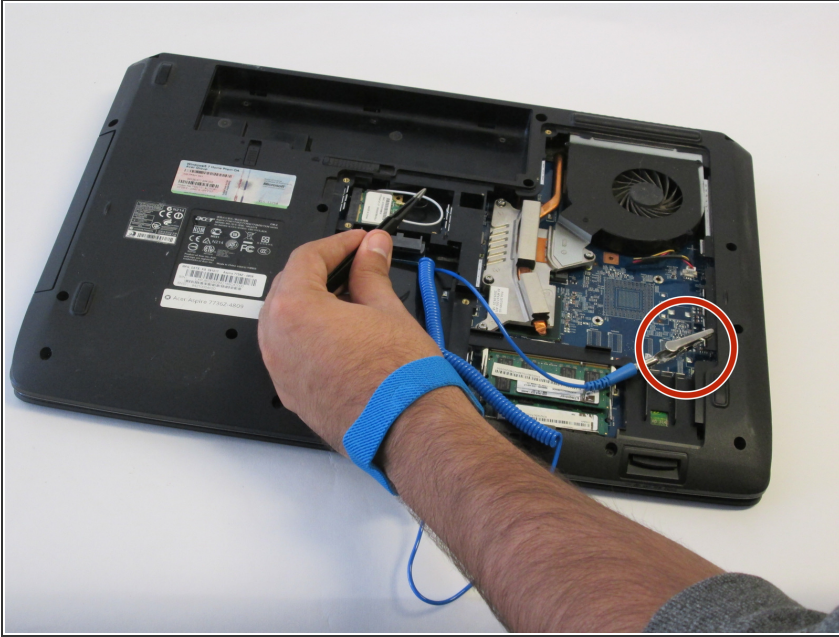

- Connect a grounding cord to a metal interface on the laptop.

⚠ Ground the laptop to prevent static electricity from damaging the electrical components inside the laptop.


Step 6 — Wireless Module

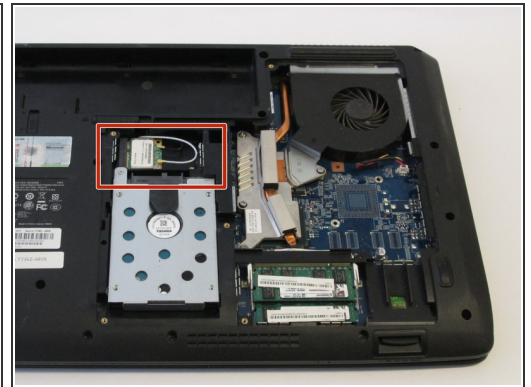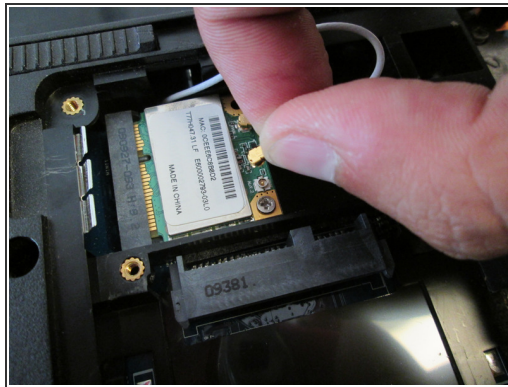

- Remove the white antenna of the wireless module.


ⓘ Use tweezers if you do not prefer using hands.

Step 7

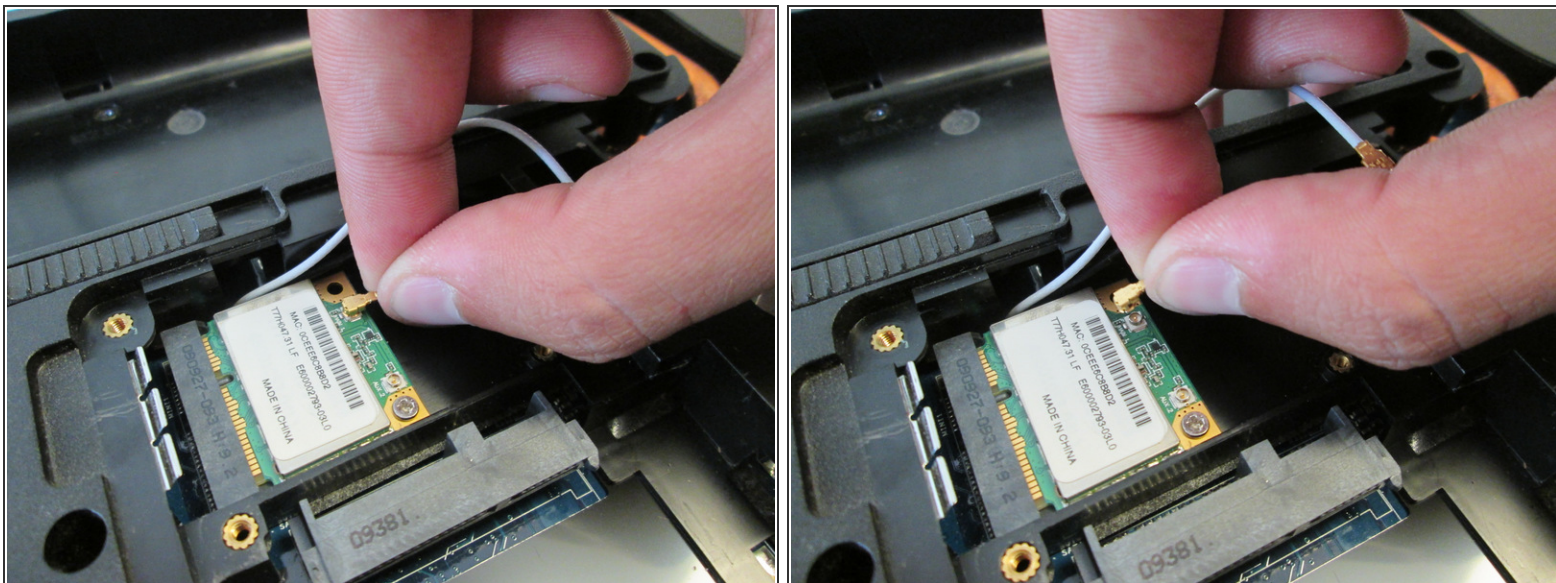



- Remove the black antenna of the wireless module.
 ⓘ Use tweezers if you do not prefer using hands.

Step 8

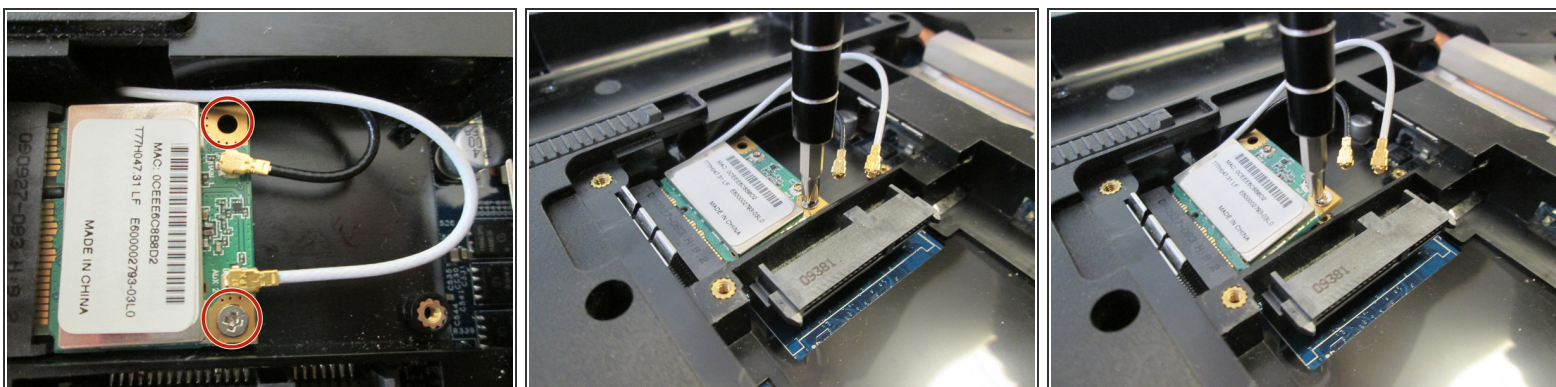

- Use the Phillips #1 screwdriver to remove the two 4.8mm Phillips #1 screws.

Step 9

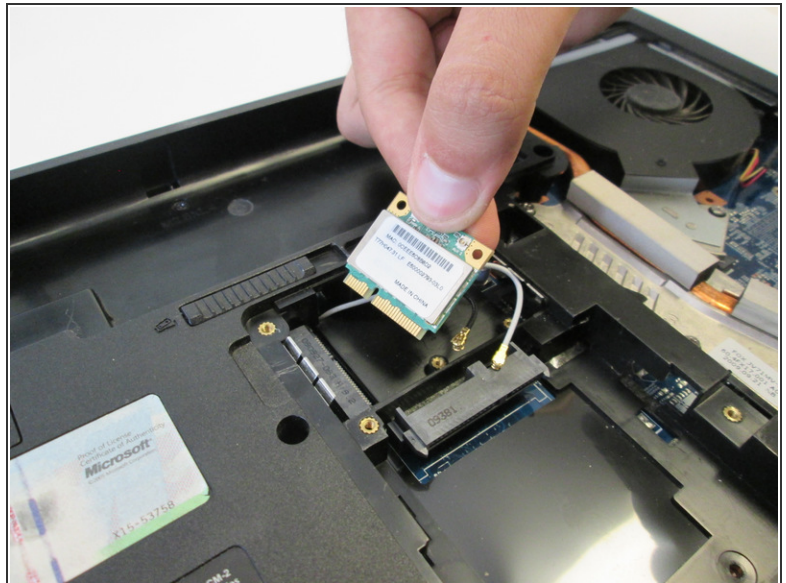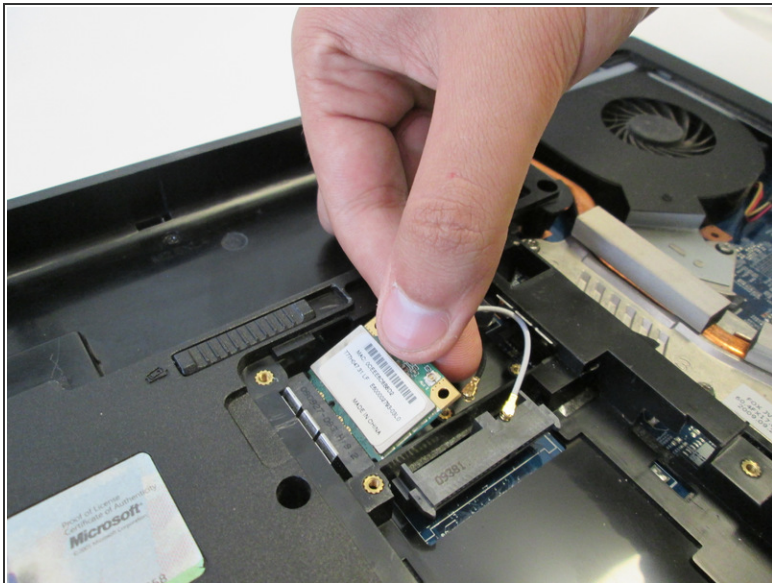

- Remove the wireless module from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:48:28 AM.